
REVISIONS			
REV.	DESCRIPTION	DATE	APPRVD.

## Notes:

- 1. Quick Connect Cable is only available for 2 unit Multi-System. When Quick Connect Cable is in use, pump control and tub alarm features are disabled.
- 2. When connecting 2 devices, use only a single remote controller. Disconnect the Remote Controller from the secondary unit.
- 3. Size the piping to allow for the maximum flow rates of the units (1"-1 1/4").
- 4. Noritz recommends the use of Isolation Kit (IK-WV-7) with installation. Connections are available in Threaded or Sweat. These kits include an integrated shut-off and service valve with unions and a pressure relief valve.
- pressure equal to the loss through the water heater and Air
- temperature than for other uses, mean such as a mixing valve shall be provided to temper the water for the other uses to help prevent scalding.

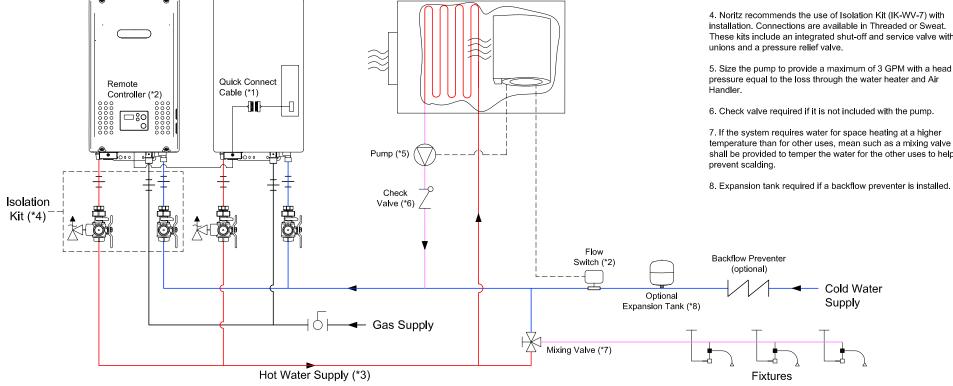

Air Handler





NR83 Series

MODEL:

## **Noritz Accessories**

QC-2 (Quick Connect Cable, for 2 unit Multi-System)

Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.

