
	2. For residential products, the use of an aquastat is the minimum pump control requirement in order to maintain the full 12-year (or 6500 operational hours) recirculation warranty. An additional timer is also recommended to further reduce the operational hours. See Noritz limited warranty for complete details. Set the aquastat to 10°F below the set output temperature of the water heater.
Quick Connect Cable (*3)	3. Quick Connect Cable is only available for 2 unit Multi-System. When Quick Connect Cable is in use, pump control and tub alarm features are disabled.
	4. When connecting 2 devices, use only a single remote controller. Disconnect the Remote Controller from the secondary unit.
	5. Size the piping to allow for the maximum flow rates of the units.
	6. Noritz recommends the use of Isolation Kit (IK-WV-7) with installation. Connections are available in Threaded or Sweat. These kits include an integrated shut-off and service valve with unions and a pressure relief valve. (Install according to local code)
Kit (*6) —	Cold Water Supply
	Aquastat (*2)
	Hot Water Return Globe Valve Pump (*1)
Gas Supply	
au	
Hot Water Supply (*5) Fixtures	



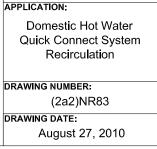


NR83 Series

MODEL:

Noritz Accessories

QC-2 (Quick Connect Cable, for 2 unit Multi-System)

Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.

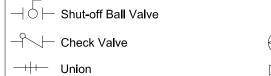

Pump

REVISIONS

1. Size the pump to provide a maximum of 2.0 GPM through the system at 10 ft of head plus piping losses. Adjust the flow using a globe valve and verify the flow rate with the maintenance

DATE

APPRVD.

DESCRIPTION

REV.

Notes:

monitors.

Mixing Valve

Pressure Relief Valve (Watts 3L, Zurn P1000A, Cash Acme FWL-82)

Thermal Expansion Tank

Aquastat (Honeywell Model

#L6006A or L6006C)