


REVISIONS			
REV.	DESCRIPTION	DATE	APPRVD.

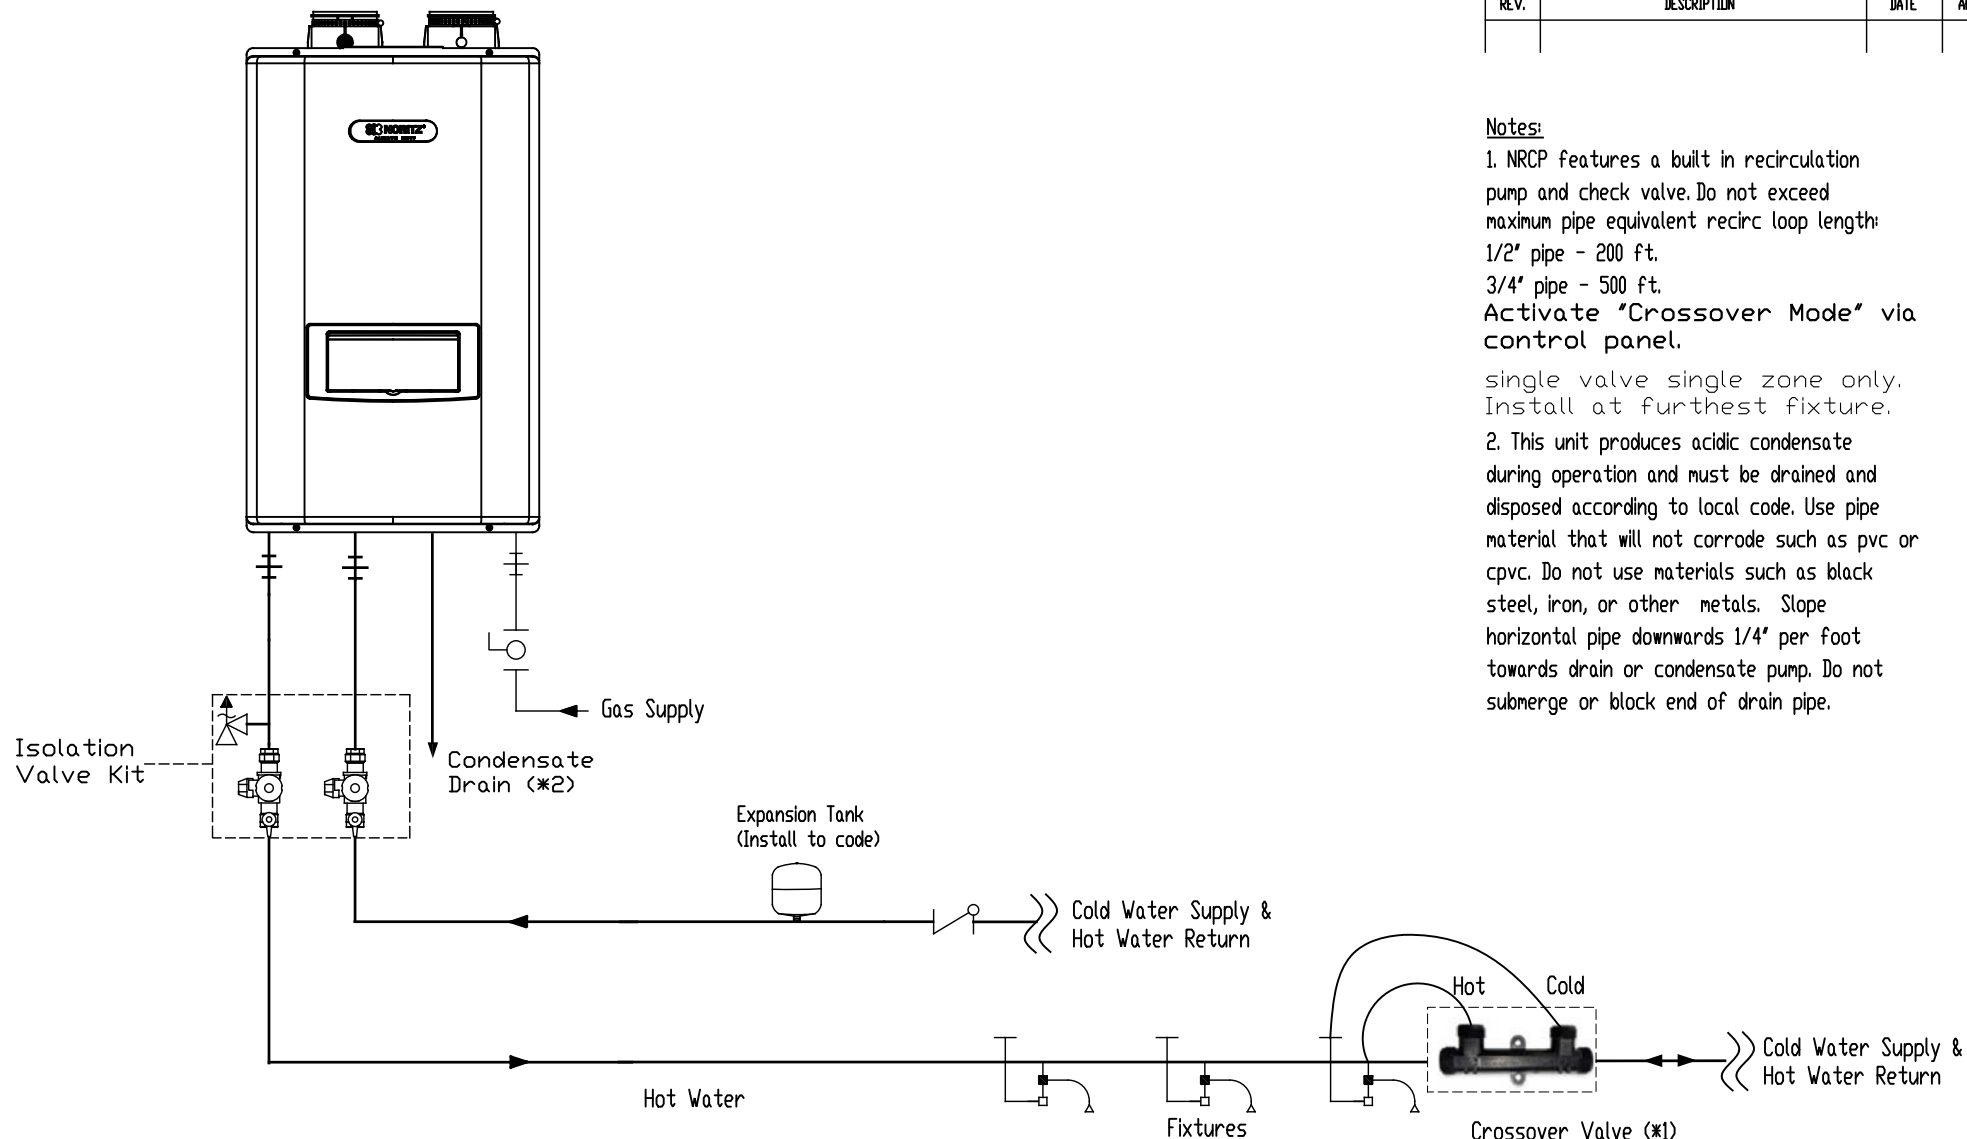

Notes:

1. NRCP features a built in recirculation pump and check valve. Do not exceed maximum pipe equivalent recirc loop length:
1/2" pipe - 200 ft.
3/4" pipe - 500 ft.
Activate "Crossover Mode" via control panel.
single valve single zone only.
Install at furthest fixture.
2. This unit produces acidic condensate during operation and must be drained and disposed according to local code. Use pipe material that will not corrode such as pvc or cpvc. Do not use materials such as black steel, iron, or other metals. Slope horizontal pipe downwards 1/4" per foot towards drain or condensate pump. Do not submerge or block end of drain pipe.

NORITZ
11160 Grace Avenue
Fountain Valley, California 92708
866-7NORITZ (866-766-7489)
www.noritz.com


MODEL: Residential Condensing-
NRCP

APPLICATION: Domestic Hot Water
Recirculation

DRAWING NUMBER: NRCP-CROSS REC

DRAWING DATE: June 2020


Noritz Accessories



Isolation Valve Kit with
Pressure Relief
(# IK-WV-200-1-TH/LF)



Crossover Valve Kit
(# CCS-V)



Condensate Neutralizer
(# NC-1S)



Quick Connect Cord
(# QC-NRCP)

Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.

Shut-off Ball Valve

Check Valve

Union



Pressure Relief Valve (Watts 174A,
Zurn P3000BR, Cash Acme F-82)



Aquastat (Honeywell Model
#L6006A or L6006C)



Pump



Mixing Valve



Thermal Expansion Tank